



RJ1 JOINERY CONNECTOR USER INSTRUCTIONS

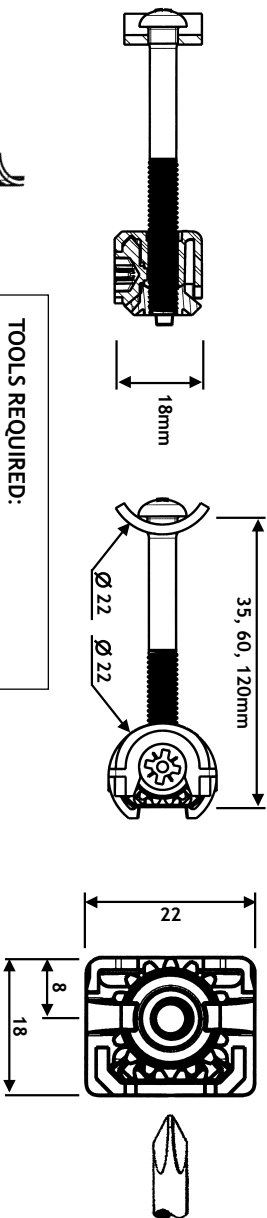

TOOLS REQUIRED:

- Drill • 10mm Wood Bit
- 22mm Forstner bit or Spade bit
- Measure Rule and Pencil.

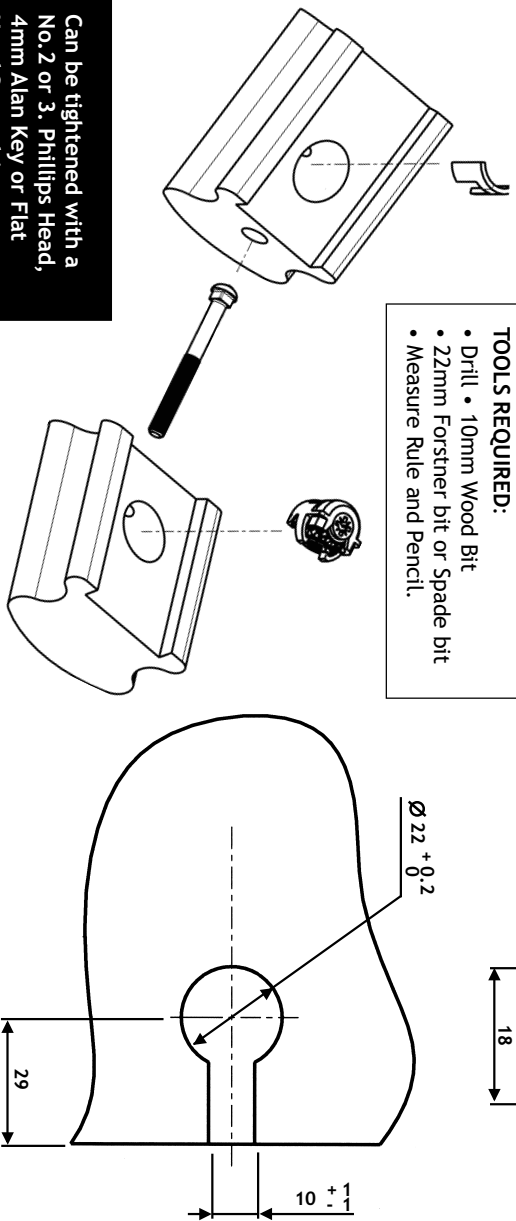

Can be tightened with a No.2 or 3, Phillips Head, 4mm Alan Key or Flat Head Screwdriver.